


NOTICE LIGHTING MODULE: VOLUPTÉ M (ref LAM100-M)

**Read carefully before use and keep
IMPORTANT**

- . Only Lairial components must be used
- . Before use: if the end of the lamp jewel (spring) is pushed in, gently stretch it to reshape it
- . Only E27 globe bulbs, 100 W max must be used
- . Do not leave Volupte near a flame
- . If the cable is damaged, it must be replaced exclusively by Lairial
- . To carry Volupte M, hold it by the cut-outs inside the disc

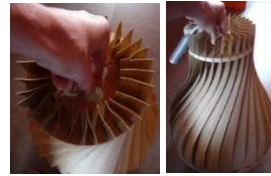

CONNECTING /DISCONNECTING

CAUTION: Before connecting the modules, disconnect Volupte from the socket or switch off the power to the electrical panel (pendant)

A-CONNECT



1- Prepare the modules (lighting and wire)



2- Insert the male connector into the female connector until you hear a "click"



3- Move the two springs together



4- Insert the wire module holder into the spring of Volupte (Blistering at the tip)



5- Hold the Volupte spring with your hand and turn the other part of the spring clockwise. Pull lightly to check for

B-DISCONNECT

- 1-** Hold the Volupte spring with your hand and unscrew the spring from the connector module counterclockwise. IMPORTANT: do not disengage the springs by pulling
- 2-** Disconnect by pulling lightly

IMPORTANT: the spring has only aesthetic function. Do not pull on the turns, it will distort it and harm the aesthetics of the object

INSTALL / CHANGE BULB

IMPORTANT: Do not touch the bare hand glass

- 1-** Unplug Volupte from the socket or switch off the power on the electrical panel (pendant)
- 2-** Let the lamp cool
- 3-** Hold the socket with one hand, and with the other hand screw / unscrew the bulb

Note: If Volupte is suspended, you can disconnect it from the connection module (see connect / disconnect) to change the bulb more comfortably

USE AS A PENDANT (with the wire modules ref LAA110 / LAA210)

Depending on the wire module, the suspension is simple or in composition and the connection is made to the ceiling or via a plug. For general lighting, to highlight way spot, bedside ...

USE AS A TABLE LAMP (with wire module ref LAA100)



You can use Volupte in both directions:

- on the flared part for a luminous presence
- on the disc side for "spotlight" lighting. In this case, gently bend the cable to the output of the disc and position it between 2 slats.

CLEANING

The shape of Volupte prevents the dust from settling. However, if you want to clean it:

- 1-** Disconnect Volupte from the power socket or turn off the power on the electrical panel (pendant)
- 2-** Disconnect Volupte from the connection module (see connect / disconnect) and place it
- 3-** Remove the first slat from the disc, hold it with one hand and gently remove the dust with a soft cloth (NO WATER, NO CHEMICAL OR DETERGENT). Replace the slat in the notch of the disc by positioning it perpendicular to the disc
- 4-** Repeat with the other slats
- 5-** Reconnect Volupte to the connection module (see connect / disconnect) and reconnect the power.

NOTES & ADVICE

- . Small cuts and cracks may occur. These evolutions, which do not question the structure of the lamp, show that wood is a living material and that your luminaire is unique
- . Differences in color and veining may occur because wood is a living material and therefore unique

Lairial has chosen to leave natural wood outside without treatment.

. Its color will evolve slightly over time and strengthen its living character

. We recommend not to apply any paint or varnish that could stiffen the wood which could then no longer twist